



*Power Anytime, Anywhere*

# Tesla™ TI1000 GPU-24 UAV

## User Manual



*Built Smart...Proven Tough*

**Tesla Industries, Inc.**  
101 Centerpoint Blvd.  
New Castle, DE 19720  
(302) 324-8910 Phone  
(302) 324-8912 Fax  
[www.teslaind.com](http://www.teslaind.com)  
[www.tesla1.com](http://www.tesla1.com)

# NOTE: All users must read this entire manual prior to operating the TI1000 GPU-24 UAV.

The TI1000 GPU-24 UAV is a limited maintenance-free and sealed unit. No repairs are authorized. Warranty will be voided if unit is tampered with in any way, or if unauthorized repairs are made. For technical support please contact:

TESLA™ INDUSTRIES INCORPORATED  
101 CENTERPOINT BLVD.  
CENTERPOINT INDUSTRIAL PARK, NEW CASTLE, DELAWARE 19720  
PHONE: (302) 324-8910 FAX: (302) 324-8912  
WEBSITE: [www.teslaind.com](http://www.teslaind.com) EMAIL: [tesla1@teslaind.com](mailto:tesla1@teslaind.com)



## CAUTION

## Shock Hazard Potential

Improper use or failure to follow instructions in this user manual can result in unit damage and/or injury or death by electrical shock.

Any attempts to open or examine the inside of the unit via a tool or device (borescope, probe, etc.) can result in unit failure and/or injury by electrical shock. This GPU is maintenance free and should not be opened or disassembled for any reason.

Always protect the unit from short circuit.

Shipping Hazards: The unit contains sealed, dry cell rechargeable batteries that do not pose a shipping hazard.

All Ground Power Units, Micro Power Units (Aviation Batteries) and including, but not limited to, Battery Chargers/Conditioners, manufactured by Tesla™ Industries, Inc., are able to safely and effectively charge any AGM, Lead Acid battery.

The Tesla™ GPU's and chargers are voltage and current regulated to 0.01% (dual loop). The charging voltage is calibrated, by Tesla™, to 28.6 volts and is pure dc (no power line ripple).

### Maximum Charge Voltage by Battery Type

Type:	Charging Voltage / Cell	Charging Voltage / 12v	Charging Voltage / 24v
SLI/Flooded	2.366v to 2.416v	14.2v to 14.5v	28.4v to 29v
Lead Acid/Flooded	2.366v to 2.416v	14.2v to 14.5v	28.4v to 29v
Sealed Lead Acid	2.366v to 2.416v	14.2v to 14.5v	28.4v to 29v
VRLA	2.366v to 2.416v	14.2v to 14.5v	28.4v to 29v
AGM	2.433v to 2.466v	14.6v to 14.8v	29.2v to 29.6v
GEL	2.350v to 2.400v	14.1v to 14.4v	28.2v to 28.8v

Copyright © 2020 by Tesla™ Industries, Incorporated. All rights reserved.



**SAFETY DATA SHEET**

Form #: SDS 853027  
 Revised: AG  
 Supersedes: AF  
 ECO #: 1002195

<b>I. PRODUCT IDENTIFICATION</b>	
<b>Chemical Trade Name (as used on label):</b> Tesla™ Industries, Inc.	<b>Chemical Family/Classification:</b> Sealed Lead Battery
<b>Synonyms:</b> Sealed Lead Acid Battery, VRLA Battery	<b>Telephone:</b> For information, contact Tesla™ Industries, Inc. Customer Service Department at 302-324-8910
<b>Manufacturer's Name/Address:</b> Tesla™ Industries, Inc 101 Centerpoint Blvd. New Castle, DE 19720-4180	<b>24-Hour Emergency Response Contact:</b> CHEMTREC DOMESTIC: 800-424-9300 CHEMTREC INT'L: 703-527-3877

<b>II GHS HAZARDS IDENTIFICATION</b>		
<b>HEALTH</b>	<b>ENVIRONMENTAL</b>	<b>PHYSICAL</b>
Acute Toxicity (Oral/Dermal/Inhalation) Category 4 Skin Corrosion/Irritation Category 1A Eye Damage Category 1 Reproductive Category 1A Carcinogenicity (lead compounds) Category 1B Carcinogenicity (acid mist) Category 1A Specific Target Organ Toxicity (repeated exposure) Category 2	Aquatic Chronic 1 Aquatic Acute 1	Explosive Chemical, Division 1.3

<b>GHS LABEL:</b>		
<b>HEALTH</b>	<b>ENVIRONMENTAL</b>	<b>PHYSICAL</b>

<b>Hazard Statements</b> <b>DANGER!</b> Causes severe skin burns and serious eye damage. May damage fertility or the unborn child if ingested or inhaled. May cause cancer if ingested or inhaled. Causes damage to central nervous system, blood and kidneys through prolonged or repeated exposure. May form explosive air/gas mixture during charging. Explosive, fire, blast, or projection hazard. May cause harm to breast-fed children Harmful if swallowed, inhaled, or contact with skin Causes skin irritation, serious eye damage.	<b>Precautionary Statements</b> Wash thoroughly after handling. Do not eat, drink or smoke when using this product. Wear protective gloves/protective clothing, eye protection/face protection. Avoid breathing dust/fume/gas/mist/vapors/spray. Use only outdoors or in a well-ventilated area. Contact with internal components may cause irritation or severe burns. Avoid contact with internal acid. Irritating to eyes, respiratory system, and skin. Obtain special instructions before use. Do not handle until all safety precautions have been read and understood Avoid contact during pregnancy/while nursing Keep away from heat./sparks/open flames/hot surfaces. No smoking
---	---

<b>III. COMPOSITION/INFORMATION ON INGREDIENTS</b>		
<b>Components</b>	<b>CAS Number</b>	<b>Approximate % by Weight</b>
<b>Inorganic Lead Compound:</b>		
Lead	7439-92-1	45 - 60
Lead Dioxide	1309-60-0	15 - 25
Tin	7440-31-5	0.1 - 0.2
<b>Sulfuric Acid Electrolyte (Sulfuric Acid/Water)</b>	7664-93-9	15 - 20
<b>Case Material:</b>		5 - 10
Polypropylene	9003-07-0	
Polystyrene	9003-53-6	
Styrene Acrylonitrile	9003-54-7	
Acrylonitrile Butadiene Styrene	9003-56-9	
Styrene Butadiene	9003-55-8	
Polyvinylchloride	9002-86-2	
Polycarbonate, Hard Rubber, Polyethylene	9002-88-4	
Polyphenylene Oxide	25134-01-4	
Polycarbonate/Polyester Alloy	--	
<b>Other:</b>		
Absorbent Glass Mat	--	1 - 2



SAFETY DATA SHEET

Form #: SDS 853027
Revised: AG
Supersedes: AF
ECO #: 1002195

Inorganic lead and sulfuric acid electrolyte are the primary components of every battery manufactured by Tesla™ Products.
There are no mercury or cadmium containing products present in batteries manufactured by Tesla™ Products.

IV. FIRST AID MEASURES

Inhalation:

Sulfuric Acid: Remove to fresh air immediately. If breathing is difficult, give oxygen. Consult a physician
Lead: Remove from exposure, gargle, wash nose and lips; consult physician.

Ingestion:

Sulfuric Acid: Give large quantities of water; do not induce vomiting or aspiration into the lungs may occur and can cause permanent injury or death; consult a physician
Lead: Consult physician immediately.

Skin:

Sulfuric Acid: Flush with large amounts of water for at least 15 minutes; remove contaminated clothing completely, including shoes. If symptoms persist, seek medical attention. Wash contaminated clothing before reuse. Discard contaminated shoes
Lead: Wash immediately with soap and water.

Eyes:

Sulfuric Acid and Lead: Flush immediately with large amounts of water for at least 15 minutes while lifting lids
Seek immediate medical attention if eyes have been exposed directly to acid.

V. FIRE FIGHTING MEASURES

Flash Point: N/A Flammable Limits: LEL = 4.1% (Hydrogen Gas) UEL = 74.2% (Hydrogen Gas)

Extinguishing Media: Carbon dioxide; foam; dry chemical. Avoid breathing vapors. Use appropriate media for surrounding fire.

Special Fire Fighting Procedures:

If batteries are on charge, shut off power. Use positive pressure, self-contained breathing apparatus. Water applied to electrolyte generates heat and causes it to spatter. Wear acid-resistant clothing, gloves, face and eye protection. Note that strings of series connected batteries may still pose risk of electric shock even when charging equipment is shut down.

Unusual Fire and Explosion Hazards:

Highly flammable hydrogen gas is generated during charging and operation of batteries. To avoid risk of fire or explosion, keep sparks or other sources of ignition away from batteries. Do not allow metallic materials to simultaneously contact negative and positive terminals of cells and batteries. Follow manufacturer's instructions for installation and service.

VI. ACCIDENTAL RELEASE MEASURES

Spill or Leak Procedures:

Stop flow of material, contain/absorb small spills with dry sand, earth, and vermiculite. Do not use combustible materials. If possible, carefully neutralize spilled electrolyte with soda ash, sodium bicarbonate, lime, etc. Wear acid-resistant clothing, boots, gloves, and face shield. Do not allow discharge of unneutralized acid to sewer. Acid must be managed in accordance with local, state, and federal requirements. Consult state environmental agency and/or federal EPA.

VII. HANDLING AND STORAGE

Handling:

Unless involved in recycling operations, do not breach the casing or empty the contents of the battery. There may be increasing risk of electric shock from strings of connected batteries. Keep containers tightly closed when not in use. If battery case is broken, avoid contact with internal components. Keep vent caps on and cover terminals to prevent short circuits. Place cardboard between layers of stacked automotive batteries to avoid damage and short circuits. Keep away from combustible materials, organic chemicals, reducing substances, metals, strong oxidizers and water. Use banding or stretch wrap to secure items for shipping.

Storage:

Store batteries in cool, dry, well-ventilated areas with impervious surfaces and adequate containment in the event of spills. Batteries should also be stored under roof for protection against adverse weather conditions. Separate from incompatible materials. Store and handle only in areas with adequate water supply and spill control. Avoid damage to containers. Keep away from fire, sparks and heat. Keep away from metallic objects which could bridge the terminals on a battery and create a dangerous short-circuit

Charging:

There is a possible risk of electric shock from charging equipment and from strings of series connected batteries, whether or not being charged. Shut-off power to chargers whenever not in use and before detachment of any circuit connections. Batteries being charged will generate and release flammable hydrogen gas. Charging space should be ventilated. Keep battery vent caps in position. Prohibit smoking and avoid creation of flames and sparks nearby. Wear face and eye protection when near batteries being charged.

VIII. EXPOSURE CONTROLS/PERSONAL PROTECTION

Exposure Limits (mg/m3) Note: N.E.= Not Established

Table with 7 columns: INGREDIENTS (Chemical/Common Names), OSHA PEL, ACGIH, US NIOSH, Quebec PEV, Ontario OEL, EU OEL. Rows include Lead and Lead Compounds, Tin, Sulfuric Acid Electrolyte, Polypropylene, Polystyrene, Styrene Acrylonitrile, Acrylonitrile Butadiene, Styrene, Styrene Butadiene, Polyvinylchloride.

For expanded detailed info, download the PDF online at...
http://www.teslaind.com/PDF/chart/Tesla-Safety-Data-Sheet.pdf.

# Table of Contents

Section 1 – Safety Review	1
1.1 – Safety Notices	1
1.2 – Symbols	1
1.3 – Hazards	2
1.4 – Important Safety Precautions	3
1.5 – Extreme Environments	3
Section 2 – Product Overview	4
2.1 – Introduction	4
2.2 – Indication of Terms: Shall, Should and May	4
2.3 – Front Panel Overview	5
2.4 – General Specifications	6
2.5 – Physical Dimensions	7
2.6 – Airflow Ports	7
2.7 – Operating Positions	8
2.8 – AC Input Circuit Breaker	9
2.9 – 24 VDC Output Connector	9
2.10 – Input Voltage Selector Switch	10
2.11 – “Push to Test” Button and LED Status Indicator	11
Section 3 – Operating Procedures	12
3.1 – Operating Procedures	12
3.2 – General	12
3.3 – Operating Limits and Restrictions	12
3.4 – Performance	12
3.5 – Temperature Specifications	13
3.6 – Environmental	14
3.7 – Normal Functional Test Procedures	15-16
3.8 – Pre-Operation	17
3.9 – Transporting Unit	17
3.10 – Regulated AC Power	18
3.11 – Charging Unit	18

Section 4 – Post Operation	19
4.1 – General	19
4.2 – After Use	19
4.3 – Power Cell Recharge	19-20
Section 5 – Unit Care and Maintenance	21
5.1 – Unit Care	21
5.2 – Unit Servicing	22
5.3 – Packaging and Shipping	22
5.4 – Storage	22
Section 6 – Troubleshooting and FAQ	23
6.1 - Frequently Asked Questions	23-24
6.2 - Basic Usage/Operation Questions	24
6.3 - Basic Troubleshooting	25
Section 7 – Performance Data	26
7.1 – Purpose	26
7.2 – General	26
7.3 – Data Basis	26
7.4 – Specific Conditions	26
7.5 – General Conditions	26
7.6 – Temperature Conversion Chart	27
7.7 – Output Voltage	28
7.8 – Maximum Output Current	28
Section 8 – Optional Accessories	29
8.1 – Tesla™ Shipping Case	29
8.2 – GPU Protective Covers	29
8.3 – Tesla™ AC Line Cords	29
8.4 – Transport Dolly	30
Appendix A	31-35
Repair Request Form	37

# Abbreviations and Symbols

Abbreviations that may be used within the text, headings and titles of this manual.

## LIST OF ABBREVIATIONS




### **Abbreviation**   **Definition**

ac	Alternating Current
AFT	Airflow Technology
AWG	American Wire Gauge
amp or A	Ampere
cont	Continuous
°C	Degree Celsius
°F	Degree Fahrenheit
dc	Direct Current
EFF	Efficiency
ft	Feet
FWD	Forward
GPU	Ground Power Unit
Hr	Hour
Hz	Hertz
kg	Kilograms
kHz	Kilohertz
kW	Kilowatts
LED	Light Emitting Diode
max	Maximum
MΩ	megaohm
min	Minimum
MPU	Micro Power Unit
NEMA	National Electrical Manufacturers Association
Ω	ohm
PF	power factor
PFC	power factor correction
rms	root-mean-square
THD	Total Harmonic Distortion
TMDE	Test, Measurement, & Diagnostic Equipment
UAV	Unmanned aerial vehicle
Vac	Volts, Alternating Current
Vdc	Volts, Direct Current
W	watts

# Section 1 – Safety Review

## 1.1 - Safety Notices

Safety notices appear throughout this manual to alert the user to important information regarding proper installation, operation, maintenance and storage of the unit. These notices, as illustrated below, contain a key word that indicates the level of hazard and a triangular icon that indicates the specific type of hazard.

 <b>WARNING</b>	Indicates a condition, operating procedure or practice, which if not adhered to could result in serious injury or death.
 <b>CAUTION</b>	Indicates a condition or operating procedure, which if not strictly adhered to could result in damage or destruction of equipment.
 <b>NOTE</b>	Indicates a condition, operating procedure or practice, which is essential to highlight.

## 1.2 - Symbols

The following symbols will appear within the warning triangles to alert the user to the specific type of danger or hazard.



Figure 1.2.1 – Different types of hazard and caution symbols



### 1.3 – Hazards



**WARNING**

**Shock Hazard Potential**

Severe injury or death from electrical shock may occur, if either user or the unit is wet, while the unit is connected to a power source. If the unit has come into contact with water, disconnect ac power from the ac source. If AC Input Circuit Breaker has tripped due to water infiltration, DO NOT try to reset it with the ac line voltage attached.



**WARNING**

**Shock Hazard Potential**

Severe injury or death from electrical shock can occur when damp electrical plugs are connected to the unit. Before making any connections, turn off unit. Failure to use proper grounding can cause potential shock hazard! In different countries, the power cord may require the use of a plug adapter to achieve plug style compatibility for operation. Use only adapters with proper grounding mechanism.

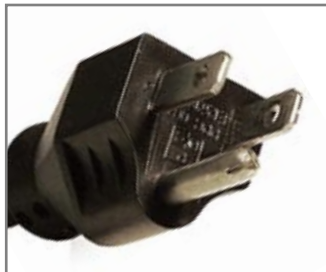


Figure 1.3.1 – Proper Ground Grounded Plug with Grounding Pin



Figure 1.3.2 – Proper Ground Adapter with Grounding Mechanism (Secured to Outlet)



Figure 1.3.3 – Improper Ground Plug with No Grounding Pin



**CAUTION**

**Unit Damage Potential**

The use of unapproved ac power will damage the unit. Check the Input Voltage Selector Switch window (outlined in blue) to ensure the switch setting (115V or 230V) matches the ac power source (hangar wall, flight line ac power) prior to connecting the unit for recharging.



Figure 1.3.4 – TI1000 GPU-24 UAV Input Voltage Selector Switch

## 1.4 – Important Safety Precautions



### WARNING

#### Fire/Explosion Hazard Potential

Severe injury or death from fire or explosion can occur if electrical sparks are produced near fuel vapors. DO NOT CONNECT ac power supply WHILE FUELING. AC power functions of unit shall not be operated during any fuel handling operation. Power output is restricted to dc power only.

## 1.5 – Extreme Environments



### CAUTION

#### Unit Damage Potential

The unit's charger temperature switch automatically disables the unit when the internal temperature exceeds 150°F (65°C). This protects the unit from overheating and damage. If the unit shuts down, move the unit into a cooler environment such as shade or air conditioning when possible. Perform a full function test, after the unit has been allowed to cool, prior to use.

## Section 2 – Product Overview

### 2.1 – Introduction

Thank you and congratulations on the purchase of your new TI1000 GPU-24 UAV Ground Power Unit.

The TI1000 GPU-24 UAV provides DC electrical ground power for aircraft flight line, maintenance, and ground support operations. The unit is designed to provide 24 volt DC output for aircraft engine starting and 24 or 28.5 volts DC output for ground maintenance, avionics/electrical troubleshooting and testing. The observance of procedures, limitations and performance criteria ensures peak operating efficiency and maximizes operational capabilities and life of the TI1000 GPU-24 UAV.

This manual contains the complete operating instructions and procedures for the TI1000 GPU-24 UAV needed to safely and efficiently operate this GPU.



Figure 2.1.1 – TI1000 GPU-24 UAV

### 2.2 – Indication of Terms: Shall, Should and May

Within this technical manual the word “shall” is used to indicate a mandatory requirement for proper operation and warranty purposes. The word “should” is used to indicate a non-mandatory but preferred method of accomplishment. The word “may” is used to indicate an acceptable method of accomplishment.

## 2.3 – Front Panel Overview



1. **AC Input Circuit Breaker** – Trips if over-current fault condition occurs.
2. **“Push to Test” Button** – Displays current battery charge state when pressed.
3. **DC Output Circuit Breaker** – Trips if over-current fault condition occurs.
4. **24 VDC Output Connector** – Provides 24 Vdc to 28.5 Vdc @ 10 A.
5. **AC Input Connector** – Connects to Single Phase 100-260 Vac line voltage.
6. **24 VDC Capacity Meter** – Indicates the 24V battery charge state/power output status.
7. **Input Voltage Selector Switch** – Allows unit to operate within voltage range of either 100-130 Vac or 200-260 Vac.
8. **Air Intake Ports** – Provide airflow for cooling internal electronics.
9. **Carrying Handle** – Allows for easy transport of unit.

## 2.4 – General Specifications

### Electrical

---

#### AC Input:

- Operates and charges from Single Phase 100-260 Vac, 50/60 Hz
- 10 Amps @ 120 Vac - 1200 Watts
- 5 Amps @ 240 Vac - 1200 Watts

#### Power Cell:

- Dry, High Rate Discharge, Rechargeable , Maintenance-free

#### DC Output:

- 10 amps continuous @ 28.5 Vdc (when plugged into ac power)

#### Rechargeable Rate:

- 60 minutes (from full discharge) @ 25 °C

#### Size:

- 20.61” long x 5.2” wide x 10.56” high
- 523.49mm x 132.08mm x 268.25mm

#### Weight

- 57 lbs (28.85 kg)

#### Operating Temperature:

- -40 °C to +60 °C (-40 °F to 140 °F) without ac power
- -40 °C to +55 °C (-40 °F to 131 °F) with ac power

#### Storage Temperature:

- -65 °C to +105 °C (-85 °F to 221 °F)

#### Cell Capacity:

- +40 °C      110% ± 05%
- +25 °C      100% ± 05%
- +00 °C      80%    ± 05%
- -20 °C      65%    ± 10%
- -40 °C      50%    ± 10%

## 2.5 – Physical Dimensions

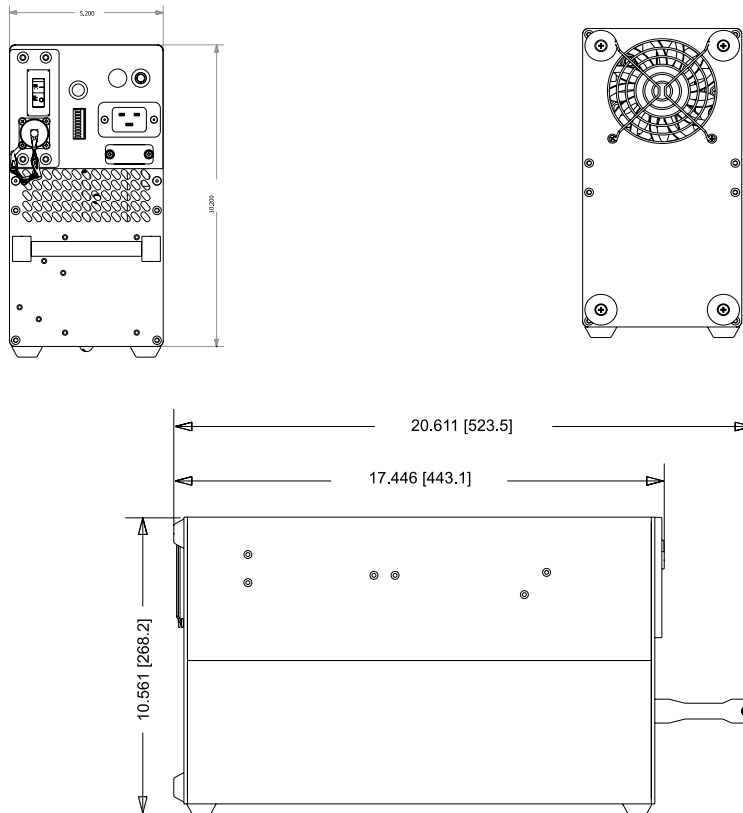


Figure 2.5.1 – TI1000 GPU-24 UAV physical dimensions

## 2.6 – Airflow Ports



### CAUTION

Damage may occur if the TI1000 GPU-24 UAV's air intake or outlet ports are obstructed. Ensure that ports are clear at all times.

When the TI1000 GPU-24 UAV is plugged into ac power, the internal cooling system will efficiently regulate unit temperature regardless of load. At room temperature (+77 °F) the exhaust air will not exceed the ambient temperature by more than 5 °F. In more extreme temperatures (greater than 90 °F) the exhaust air will not exceed the ambient temperature by more than 10 °F.

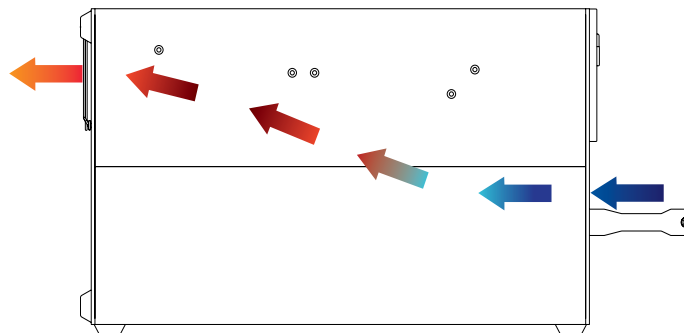


Figure 2.6.1 – Air intake, exhaust ports and internal air circulation

## 2.7 – Operating Positions

The TI1000 GPU-24 UAV can be operated in both the horizontal (Figure 2.7.1) and vertical (Figure 2.7.2) positions as shown. Make sure that the airflow is not obstructed from air intake (Figure 2.7.3) and outlet (Figure 2.7.4).

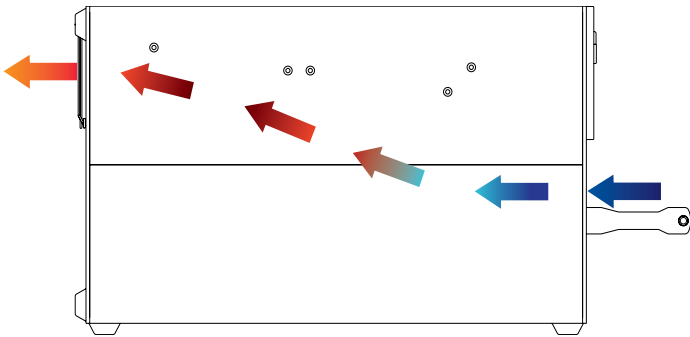


Figure 2.7.2 Horizontal Position

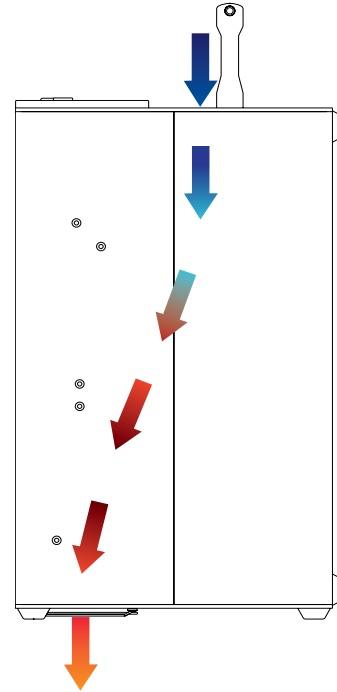


Figure 2.7.1 Vertical Position

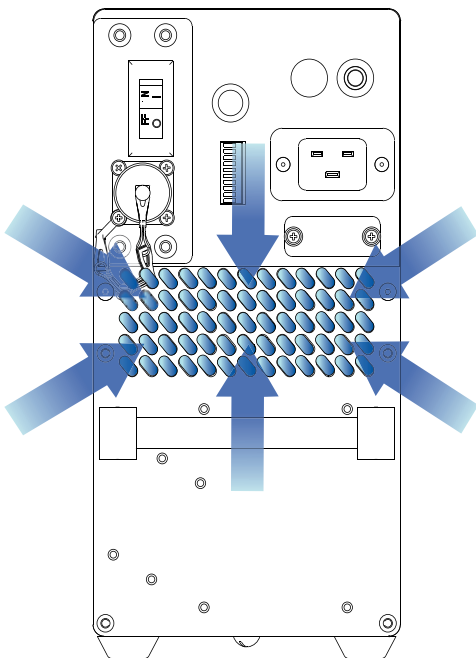


Figure 2.7.3 Front Inlet

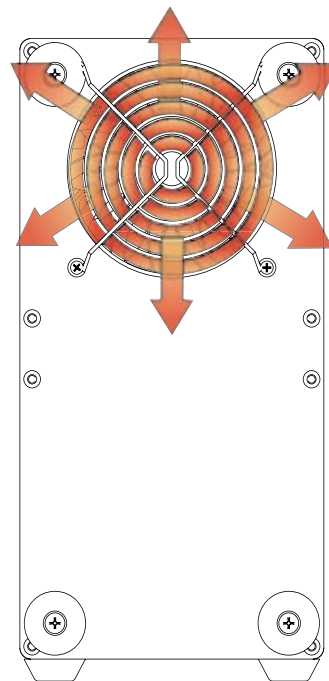


Figure 2.7.4 Rear Outlet

## 2.8 – AC Input Circuit Breaker

The ac input circuit breaker is located above the ac input connector. When the circuit breaker has been tripped, the red button will pop out. In the event that the breaker trips:

1. Disconnect the ac and dc connectors. (Unplug ac line cord on military unit.)
2. Wait for a minimum of 60 seconds.
3. Reset breaker by pressing red button.
4. Reconnect ac and dc connections to the unit. (Plug in ac line cord on military unit.)

The unit should power up automatically. If the breaker continues to trip, return the unit to Tesla™ Industries for repair.



Figure 2.8.1 - AC Input Circuit Breaker  
(outlined in blue)



Figure 2.8.2 - Pressing Circuit Breaker

## 2.9 – 24 VDC Output Connector

The 24 Vdc output connector will provide 10 amps continuous @ 28.5 Vdc (when plugged into ac power). When the output connector is not in use, cover the receptacle with the protective cover (see Figure 2.9.1). This will protect the output connector from dust and foreign matter.



Figure 2.9.1 - 24 VDC Output Connector Protective Cover



### 2.10 – Input Voltage Selector Switch

The Input Voltage Selector Switch allows the unit to operate safely within the expected voltage range of either 100-130 Vac or 200-260 Vac.



Figure 2.10.1 Input Voltage Selector Switch (outlined in blue)

#### Changing Input Voltage Selector Switch

To change the input voltage from 115 Vac to 230 Vac, simply follow these steps:

1. With cross tip screwdriver, remove one screw and rotate the clear protective cover to one side. (see figure 2.10.2)
2. Flip the switch to read 230V. (see figure 2.10.3)
3. Rotate cover back into place. Replace and tighten screw.

 <b>CAUTION</b>	Do not plug unit into 230 Vac when Input Voltage Selector Switch is set on 115 Vac.
--	---



 <b>NOTE</b>	The 115 Vac setting accommodates the voltage range of 100-130 Vac. The 230 Vac setting accommodates the voltage range of 200-260 Vac.
---	---



Figure 2.10.2 - Unscrew Protective Cover




Figure 2.10.3 - Select Voltage

 <b>NOTE</b>	Do not overtighten Selector Shield screws. Be sure star locks are on screws and snug the screw. Overtightening will damage the Selector Shield.
---	---

### 2.11 – “Push to Test” Button and LED Status Indicator


The “Push to Test” button indicates the capacity of the power cells without applying ac input power. The status of the capacity lets the user know if there is enough power to perform another engine start. When the capacity is low the unit should be connected to ac power to allow it to recharge.

1. Make sure that you wait at least 2 minutes after ac power is applied, or dc power is extracted from the unit, before you press the “Push to Test” button. This ensures a correct reading.
2. Without ac power input or dc power output, simply press the “Push to Test” button on the faceplate and hold for approximately 2 to 3 seconds.
3. The LED bar graph should light up indicating the status of the power cells.
4. In addition, the fan(s) should start operating when the button is pressed. If you do not hear the fan(s) running, stop pressing the button and check for any obstructions.



**CAUTION**

Never press the “Push to Test” button while the unit is plugged into aircraft, vehicle or ac power.



**CAUTION**

Never press the “Push to Test” button for more than 5 seconds. This may cause a temperature sensor to temporarily disrupt “Push to Test” function. (If this sensor is tripped, allow ten minutes for unit to cool before operating “Push to Test” button.)

A photograph of the front panel of a Turbo Start unit. The 'Push to Test' button is a red circular button located in the upper center of the panel, outlined with a blue circle. Other components visible include a 15A DC output circuit breaker, a circuit breaker, an A.C. input, a voltage selector, and a battery status indicator.

Figure 2.11.1 - “Push to Test” button location (outlined in blue)

A photograph of the front panel of a Turbo Start unit, similar to Figure 2.11.1, but with a person's finger pressing the red 'Push to Test' button.

Figure 2.11.2 - Pushing to Test

STATUS	STATUS	STATUS																																																																								
<table border="1" style="border-collapse: collapse; width: 100%;"> <tr><td style="background-color: red; color: white;">R</td><td style="width: 20px;"> </td><td style="background-color: red; color: white;">0</td></tr> <tr><td style="background-color: yellow;">Y</td><td style="width: 20px;"> </td><td style="background-color: yellow;">1/2</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> </table> <p>Full Charge</p>	R		0	Y		1/2	G		OK	G		OK	G		OK	G		OK	G		OK	G		OK	<table border="1" style="border-collapse: collapse; width: 100%;"> <tr><td style="background-color: red; color: white;">R</td><td style="width: 20px;"> </td><td style="background-color: red; color: white;">0</td></tr> <tr><td style="background-color: yellow;">Y</td><td style="width: 20px;"> </td><td style="background-color: yellow;">1/2</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> </table> <p>Half Charge</p>	R		0	Y		1/2	G		OK	G		OK	G		OK	G		OK	G		OK	G		OK	<table border="1" style="border-collapse: collapse; width: 100%;"> <tr><td style="background-color: red; color: white;">R</td><td style="width: 20px;"> </td><td style="background-color: red; color: white;">0</td></tr> <tr><td style="background-color: yellow;">Y</td><td style="width: 20px;"> </td><td style="background-color: yellow;">1/2</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> <tr><td style="background-color: green;">G</td><td style="width: 20px;"> </td><td style="background-color: green;">OK</td></tr> </table> <p>No Charge</p>	R		0	Y		1/2	G		OK	G		OK	G		OK	G		OK	G		OK	G		OK
R		0																																																																								
Y		1/2																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
R		0																																																																								
Y		1/2																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
R		0																																																																								
Y		1/2																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								
G		OK																																																																								


TI1000 GPU-24 UAV


11

# Section 3 – Operating Procedures

## 3.1 – Operating Procedures

This section covers normal procedures and steps necessary to ensure safe and efficient operation of the unit.

 <b>NOTE</b>	When not in use, the unit should always remain plugged into a suitable ac power source to ensure operational readiness at all times.
---	--

 <b>NOTE</b>	If current demand exceeds 10 amps, converter output voltage will drop below 28.5 Vdc and two or more LED status indicator bars will illuminate. If all LED status indicator bars illuminate, both the converter and power cells are supplying 24 Vdc power output.
---	--

## 3.2 – General

The user should be well-versed in both pre-use and functional checks for correct operations of this unit. Knowledge of the operating limits, restrictions, performance, unit capabilities and functions aids in correct and safe operations. Compliance with the instructions in this manual affect operational safety as well as the warranty of the unit.

## 3.3 – Operating Limits and Restrictions

The minimum, maximum and normal operating ranges result from careful engineering and evaluation of test data. These limitations must be adhered to during all phases of operation.

## 3.4 – Performance

Refer to Section 7, PERFORMANCE DATA to determine the capability of the unit. Consideration must be given to changes in performance resulting from variations in ambient temperature, mode of operation, state of charge (with or without ac power), and aircraft dc bus system inefficiency (voltage drops).

### 3.5 – Temperature Specifications

#### Cold/Hot Soaked Temperature

Exposing the unit for one (1) hour or more to the ambient temperature establishes the unit's cold/hot soaked stabilization temperature. If the unit's cold/hot soaked temperature is outside the normal operating temperature range, the unit must be stabilized prior to operation. For COLD SOAKED temperature stabilization, the unit must be placed in an environment with a temperature above +10°C (+41°F) for 3 hours or a temperature above +20°C (+68°F) for 2 hours. For HOT SOAKED temperature stabilization, the unit must be placed in an environment with a temperature below +38°C (+100°F) for 1 hour.

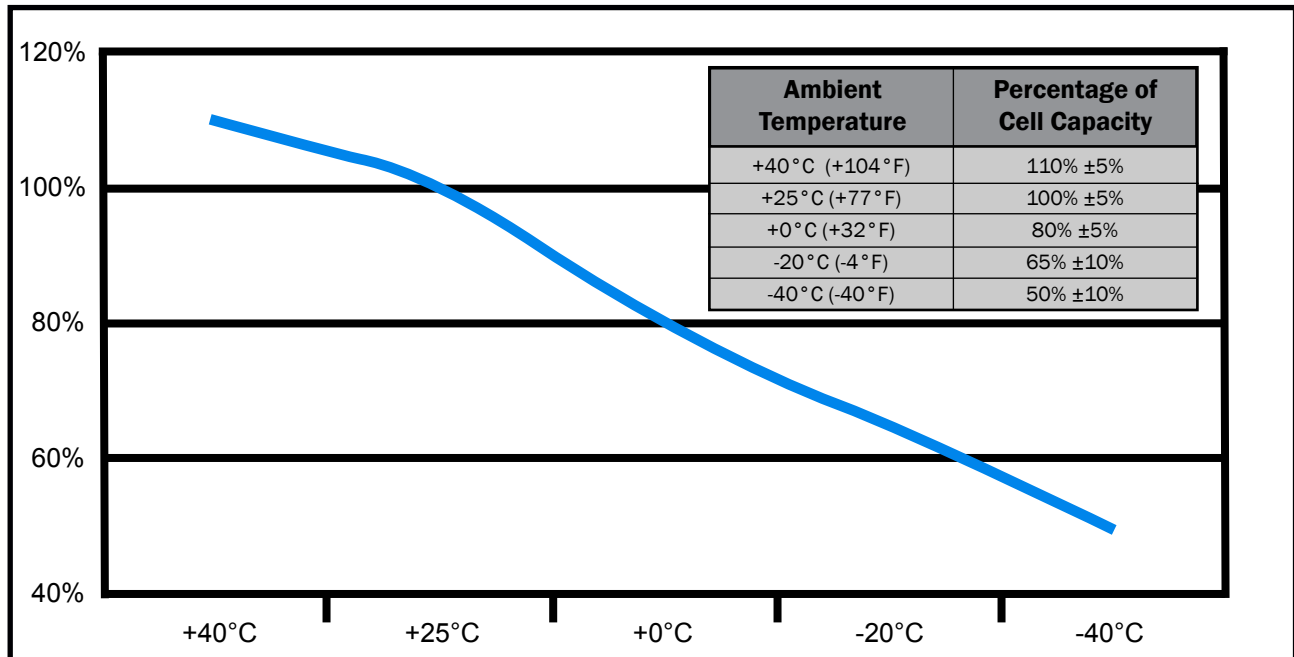


Figure 3.6.1 – Output power capability versus ambient temperature

#### Hot Soaked or Cold Soaked Definition

Simple terms: When a material is exposed to a change in temperature, its temperature will also change. Some material changes temperature quickly, others slowly. If the ambient temperature changes and is then held constant, the materials temperature will also change until its temperature stabilizes. Once the material temperature has stabilized, it is considered “soaked”.


Example: A unit is moved from the cool shade into the hot sun. That unit's temperature will increase until it stabilizes. Once stabilized, the unit would be considered “hot soaked”.



#### NOTE

The unit's temperature switch automatically disables ac power functions when the internal temperature is above 150°F (65°C). This protects the unit from overheating and damage. If the unit shuts down, move the unit into a cooler climate, such as shade or air conditioning when possible. Perform a full function test prior to use after the unit has been allowed to cool.

### 3.6 – Environmental

 <b style="font-size: 1.2em; margin-left: 10px;">WARNING</b>	<p>Operating any electrical equipment in the presence of moisture creates possible safety hazards and/or potential for equipment damage. Every effort has been made, within the scope of existing technology to prevent foreseeable safety hazards and make the unit moisture resistant to prevent damage or failure.</p>
---	---

If the unit is exposed to moisture, preventive measures and precautions shall be taken to:

- A. Prevent accumulation of moisture on ac and dc connectors/receptacles
- B. Minimize moisture entering forward inlet and aft outlet cooling fan vent ports

Unit inlet and outlet vent ports shall be covered from exposure. Unit shall be kept horizontal. Recommendations include a Protective Rain Cover to guard the unit from moisture (see Section 8). The limits and operational constraints listed below shall apply for the following environmental (weather) conditions:

Conditions	With Raincover	Without Raincover
<b>Heavy or steady rain:</b> <i>Precipitation falling with an intensity in excess of 0.30 inch (0.76 cm) or continuously between 0.30 and 0.10 inch per hour.</i>	OK	OPERATION NOT RECOMMENDED
<b>Light rain, drizzle or sleet:</b> <i>Precipitation falling on a continuous basis between 0.10 inch and less than 1/50 inch (0.5 mm) per hour</i>	OK	DC OPERATIONS ONLY
<b>Heavy or steady snow:</b> <i>Generally meaning an accumulation between 4 inches and less than 1 inch in a 12 hour period.</i>	OK	OPERATION NOT RECOMMENDED
<b>Light snow:</b> <i>Snow falling intermediately with little or no accumulation.</i>	OK	DC OPERATIONS ONLY
<b>Fog:</b>	OK	OK

### 3.7 – Normal Function Test Procedures

This section involves “normal function” test procedures, and includes steps necessary to ensure that the TI1000 GPU is operating within specified parameters prior to use. A digital multimeter (an example is shown in Figure 3.7.1) capable of measuring dc and ac voltage and resistance will be required to perform some of the tests. These functional test procedures should become routine.



Figure 3.7.1 – Digital Multimeter

#### Check Unit for Evidence of Damage

Check for dents, punctures, case distortion or misalignment, and cracked or loose connectors. If no damage is evident, proceed to the next step. If damage is evident, contact Tesla™ Industries, Inc.

#### Check DC Voltage Reading at DC Receptacle Terminals

To verify that the power cells are fully charged, set the digital multimeter to measure dc voltage. Turn on the DC Circuit Breaker before testing. As shown in Figure 3.7.2., place the positive probe (red) on the positive post (C) of the DC Output Connector and the negative probe on the negative post (A). The multimeter display should read approximately 28.5 Vdc ( $\pm 0.5$  Vdc) when power cells are fully charged and the unit is plugged into an appropriate ac power source. When the unit is not plugged into an ac power source, the multimeter display should read approximately 25.5 Vdc.



Figure 3.7.2 – Testing DC Receptacle

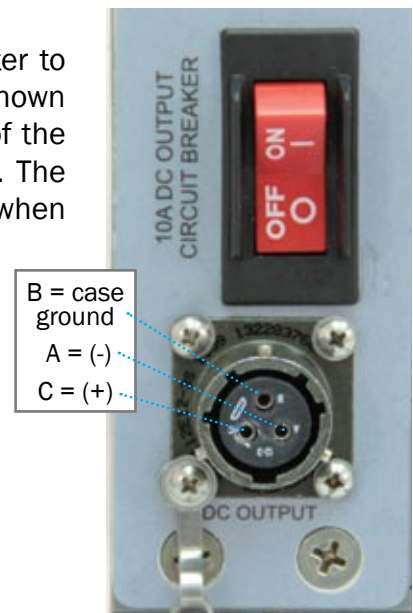


Figure 3.7.3 – DC Circuit Breaker and Output

Check Unit Internal Resistance (Test for Shorts)

**NOTE** Unit should be disconnected from any ac power sources prior to testing.



1. Set multimeter to Ohms.



2. Turn on the DC Circuit Breaker.



2. Place the negative probe on the ac ground post and the positive probe to the dc positive post (C). Multimeter should read greater than 10 MΩ.



4. Move the positive probe to the dc negative post (A). Multimeter should read greater than 10 MΩ.



5. Move the positive probe to the pin (B) on the dc receptacle. Multimeter should read less than 1Ω.



6. Move the positive probe to the fastener screw on the dc plate. Multimeter should read less than 1Ω.



1. Set multimeter to Volts.



2. Place the positive probe to the fastener screw on the dc post. Move the negative probe to the dc negative post (A). Multimeter should read 0 Volts.



3. Place the negative probe to the fastener screw on the dc plate. Move the positive probe to the dc positive post (C). Multimeter should read 0 Volts.

### 3.8 – Pre-Operation

1. Be sure to check that all input and output cables are not damaged. (See Section 5.1)
2. Check unit carefully for any evidence of damage.
3. Make sure that airflow is not obstructed from air intake and outlet. (See Section 2.6)
4. Check that all connections are secure and free from water.



Figure 3.8.1 - TI1000 GPU-24 UAV

### 3.9 – Transporting Unit

The TI1000 GPU-24 UAV can be carried for short distances by hand, but if the area of operation is further than 45 meters (150 feet) it is recommended that the TI1000 GPU-24 UAV should be transported on a vehicle or in the TI7000-184 Transport Dolly (see Section 8 Optional Accessories).

TI7000-184 Transport Dolly Dimensions:

16.87" L x 14.5" W x 49.25" H

428.50 mm x 368.30 mm x 1250.95 mm

Weight:

18.5 lbs (8.39 kg)



Figure 3.9.1 TI7000-184 Transport Dolly



### 3.10 – Regulated AC Power

#### Plugging in with AC Power

When the TI1000 GPU-24 UAV is plugged into ac power, the output is 28.5 volts. This voltage allows the system to recondition and recharge the vehicle's battery(s). It is also an optimum voltage for powering avionics and lighting on most aircraft. The GPU's ac to dc converter produces continuous amps of dc power depending on the size of the system.



#### NOTE

Check Input Voltage Selector Switch for proper setting.

#### Connect AC Power Cord To Unit

Ensure 120 or 240 Vac power cord is properly connected to an approved ac power supply. After approximately 5-8 seconds, unit's LED status indicator will illuminate indicating power cell state of charge. Cooling fan will operate. Ensure LED status indicator and cooling fan is operational prior to continuing.



Figure 3.10.1 Connecting TI1000 GPU-24 UAV to ac power supply



Figure 3.10.2 AC North American Line Cord

### 3.11 – Charging Unit

Once you have the voltage selector switch set to match the power characteristics of your line cord, you can plug the unit into a wall socket to charge the batteries. Until the unit is fully charged, the LED status will read half or no charge. Plug the TI1000 GPU-24 UAV into ac power to keep the cells charged whenever it is not in use, even if it is at Full Charge. The unit will not overcharge or overheat.

If you received this manual with a new GPU.

When the Unit is fully charged the LED indicator should show a single steady green bar. The fan will also come on at reduced speed. This is normal operation indicating the unit is in standby mode and is ready for use.

If you own an older GPU and this is a replacement manual.

Under a full charge the LED indicator should show a single steady green bar or the entire LED will be blinking. The fan will also exhibit ratcheting but will not come on. This is normal operation indicating the unit is in standby mode and is ready for use.

If the GPU's cells need to be replaced.

After 60 minutes of ac power input, the unit should be fully charged. If the "Push to Test" button is pressed and the unit still indicates it is not fully charged then the cells should be replaced.

# Section 4 – Post Operation


## 4.1 – General


Although the TI1000 GPU-24 UAV has been ruggedized and made weather resistant within the scope of unit's intended use, it is essential that good general care be taken to maintain unit in good operating condition and to maximize unit's operational life.

## 4.2 – After Use


Unit should be protected from environmental elements and man made hazards. Ideally unit should be secured in a building or shed. Most importantly, unit shall be fully covered if stored while exposed to environmental elements.

## 4.3 – Power Cell Recharge

 <b>NOTE</b>	The TI1000 GPU-24 UAV incorporates a backcharge feature that enables the unit to be recharged from the vehicle once the engine is started and the starter/generator is running. This feature will enable you to start multiple vehicles without reconnecting to ac power if the GPU is allowed to backcharge for approximately 30 seconds.
---	--

 <b>NOTE</b>	Plug the TI1000 GPU-24 UAV into ac power to keep the cells charged whenever it is not in use, even if it is at Full Charge. The unit will not overcharge or overheat.
--	---

### Connect AC Power Cord to Unit

 <b>NOTE</b>	Check Input Voltage Selector Switch for proper setting.
---	---

Ensure 120 or 240 Vac power cord is properly connected to an approved ac power supply. After approximately 5-8 seconds, ensure unit's LED status indicator illuminates indicating power cell state of charge and cooling fan is operating.

Any time the unit's power cells are fully discharged the unit shall be recharged within 24 hours to prevent performance degradation and ensure maximum life.



Figure 4.3.1 Connecting TI1000 GPU-24 UAV to ac power supply



Figure 4.3.2 AC North American Line Cord

**CAUTION** Guard From Incorrect Power Source

The TI1000 GPU-24 UAV's power cells may be damaged if recharged by NiCad or Lithium Ion battery chargers. Power cells should only be charged by either the TI1000 GPU-24 UAV's internal charger and the ac power cord furnished with the equipment, or when connected to vehicle or aircraft's external dc power receptacle.



Figure 4.3.3 - Proper and Improper Charging Methods

## Section 5 – Unit Care and Maintenance



### WARNING

Severe injury or death from electrical shock may occur, if either the user or the unit is wet, while the unit is connected to a power source.



### CAUTION

The use of unapproved or modified ac line cable or input plug may damage the unit. Do not use any type of ac voltage converter.

### 5.1 - Unit Care

#### Avoid Prolonged Exposure to Extremely Damp Environments

If the unit has come into contact with water, disconnect ac power from the ac source. If the AC Input Circuit Breaker has tripped due to water infiltration, allow the unit to dry out before attempting to reset circuit breaker. Cover the unit to prevent water seepage. If the unit is operated in extremely damp conditions, it should be stored in an environmentally controlled building when not in use. Wipe unit clean periodically with a soft cloth to remove dust, dirt, etc.



#### Protect Cables from Damage

Do not cut, crush, or drag the input or output power cables when handling the unit. Always inspect cables prior to use. If no damage is evident, proceed to the next step. If damage is evident, contact Tesla™ Customer Service. Do not attempt to use any other type of power cables other than the Tesla™ cables included with the unit.



Figure 5.1.1 – Damaged cable

## 5.2– Unit Servicing

This unit is a maintenance-free, sealed unit. No repairs outside of Tesla™ are authorized. Warranty will be voided if unit is tampered with in any way including any damage to the WARRANTY VOID stickers located on the case (see Figure 5.2.1 below). If the unit requires maintenance, please contact Tesla™ Customer Service at (302) 324-8910. A Repair Request Form can be found in the back of this manual.

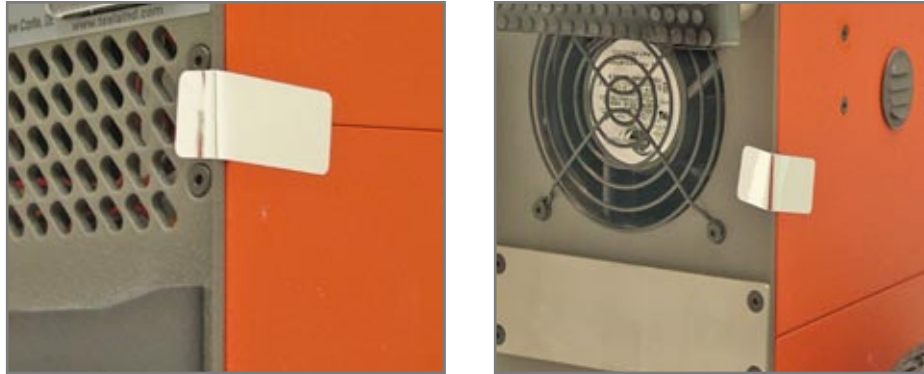


Figure 5.2.1 – Warranty Void stickers Front and Back on the unit

## 5.3 – Packaging and Shipping

Ensure proper packaging when returning the unit. Transport the unit only in a sturdy shipping crate or Tesla™ Shipping Case. It is important to enclose the Repair Request Form. Seal the crate on all sides and return it to Tesla™ at the address listed below. Please contact Tesla™ Customer Service at (302) 324-8910 with any questions or concerns.

TESLA™ INDUSTRIES, INCORPORATED  
 101 CENTERPOINT BLVD.  
 CENTERPOINT INDUSTRIAL PARK  
 NEW CASTLE, DELAWARE 19720  
 PHONE: (302) 324-8910 FAX: (302) 324-8912  
 Website: [www.teslaind.com](http://www.teslaind.com) ♦ [www.tesla1.com](http://www.tesla1.com)  
 Email: [Tesla1@teslaind.com](mailto:Tesla1@teslaind.com)



Figure 5.3.1 – Tesla™ Shipping Case

## 5.4 – Storage

If unit can not be connected to ac power while in storage, we recommend to charge the unit once a year. The shelf-life of 12 months is due to the battery /cells inside the unit. We guarantee the unit will hold 80% of its charge for a period of 12 months without being recharged. When the GPU's leave the facility, they are fully charged and if they are to go into storage (without being used), they will maintain 80% of their charge after 12 months. The units has a life expectancy of 5 to 7 years, if maintained properly.

# Section 6 – Troubleshooting and FAQ

## 6.1 – Frequently Asked Questions

### 1. How does a Tesla™ TI1000 GPU-24 UAV work?

The Tesla™ TI1000 GPU-24 UAV incorporates an intelligent charging system with a pure dc output that allows it to rapidly charge and condition a battery without overcharging or damaging it.

### 2. How much dc power will the TI1000 GPU-24 UAV provide?

The TI1000 GPU-24 UAV will provide up to 50 continuous amps @ 28.5 Vdc.

### 3. How long will it take to charge my battery?

Battery charge time can be determined by taking the battery's rated amp hours and dividing this number by the TI1000's maximum output current. For example, a 24 V / 50 Ah battery will take one hour to charge using a TI1000 GPU-24 UAV.

### 4. What is included with my TI1000 GPU-24 UAV?

This unit comes with a Tesla™ approved 8ft. DC Aviation Cable Assembly or a 15ft. DC NATO Cable Assembly, a North American line cord, a user manual, and a limited two-year warranty.

### 5. Is the TI1000 GPU-24 UAV waterproof?

The TI1000 GPU-24 UAV is NOT waterproof. See Section 5.1 for further information regarding safe operation in damp environments.

### 6. Are there any HAZMAT or disposal issues?

No. Contact Tesla™ for more information.

### 7. Are Tesla™ TI1000 GPU-24 UAV used in shop maintenance and testing?

Tesla systems are gaining popularity throughout maintenance facilities, instructional facilities, laboratories, manufacturing plants, aircraft hangars and many other locations. The reason is due to the precise flat line dc power, the small, portable and quiet nature of our systems and the maintenance free aspect. We can custom tailor ground power systems to fit your individual requirements.

### 8. Can one person transport it?

The TI1000 GPU-24 UAV is designed to be handled by one person. The TI1000 GPU-24 UAV system weighs 57 lbs. and can be carried or wheeled on a dolly. See section 8 for Transport Dolly info.

### 9. How do I get my unit serviced?

Contact Tesla. We can be reached at (302) 324-8910. Ask for customer service. You can also email us at [tesla1@teslaind.com](mailto:tesla1@teslaind.com). Once we receive the unit at our facility, we will examine it. Systems that are protected under warranty will be repaired at no charge. If the warranty has expired, you will receive a quote for necessary repairs prior to work being done. Our turnaround time is 48 hours once repairs are authorized.

## 10. Can I make my own repairs to unit?

During the warranty period, the unit can only be repaired by Tesla™ Industries for the warranty to remain in effect. Regardless, we strongly recommend allowing Tesla to repair any unit as we will analyze the complete system and re-calibrate it.

## 11. What type of maintenance does the unit require?

Although the systems are maintenance free, please keep the vent areas clean and free of debris. Keep units in a well ventilated area. Keep the unit in a protected environment when not in use (maintenance facility, shed).

## 6.2 - Basic Usage/Operation Questions

### 1. What's the best position to place the unit for use vertical or horizontal?

Preferred position is horizontal for stability and airflow considerations.

### 2. How do I check the status of the Available Power?

The "Available Power" LED Indicator provides a way for the user to visually see the amount of available power that the unit can supply. This lets the operator know if there is enough power to perform ground maintenance. For more information see Section 2.11.

### 3. Why is the cooling fan always running when I am plugged into AC power?

Constant cooling fan operation ensures proper and consistent ventilation of the unit.

### 4. Why does the cooling fan slow down?

Cooling fan rpm varies for better temperature regulation.

### 5. What do I do if a circuit breaker trips?

The AC input circuit breakers are located above the AC Input Connector. When the circuit breaker has been tripped, either of the red buttons will pop out. In the event that the breaker trips:

1. Disconnect the AC and DC connectors. (Unplug AC line cord on military unit.)
2. Wait for a minimum of 60 seconds.
3. Reset breaker(s) by pressing red button(s).
4. Reconnect AC and DC connections to the unit. (Plug in AC line cord on military unit.)

The unit should power up automatically. If the breaker continues to trip, return the unit to Tesla Industries for repair.

### 6.3 - Basic Unit Troubleshooting

Fault	Possible Cause	Remedy
1. Output Capacity LED does not come on.	<ul style="list-style-type: none"> <li><b>A.</b> Circuit Breaker has tripped.</li> <li><b>B.</b> No outlet power.</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Plug the unit in to the appropriate ac power outlet.</li> <li><b>B.</b> If LEDs still do not illuminate,</li> <li><b>C.</b> Please contact Tesla™ Customer Service at (302) 324-8910</li> </ul>
2. Unit will not power from AC Outlet.	<ul style="list-style-type: none"> <li><b>A.</b> AC line cord is damaged or bad.</li> <li><b>B.</b> Is ac line cord fully plugged into unit and wall outlet.</li> <li><b>C.</b> AC circuit breaker has been tripped.</li> <li><b>D.</b> No ac power at outlet.</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Do a continuity test on the ac line cord</li> <li><b>B.</b> Check if line cord is properly secured.</li> <li><b>C.</b> Check to make sure ac circuit breaker is placed in the “ON” position.</li> </ul>
3. Unit failed function test.	<ul style="list-style-type: none"> <li><b>A.</b> Internal failure.</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Please contact Tesla™ Customer Service at (302) 324-8910</li> </ul>
4. Unit emits sparks when plugged into power source.	<ul style="list-style-type: none"> <li><b>A.</b> Water or moisture has seeped in unit</li> <li><b>B.</b> Internal failure.</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Move unit to dry warm air and allow to dry for over 48 hours.</li> <li><b>B.</b> Do Not Use Unit. Please contact Tesla™ Customer Service at (302) 324-8910</li> </ul>
5. Unit works then shuts down.	<ul style="list-style-type: none"> <li><b>A.</b> Unit is overheating.</li> <li><b>B.</b> Cooling fans and vents are obstructed or inoperable.</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Move the unit to an area 10° -20° less than ambient temperature.</li> <li><b>B.</b> Clean and clear cooling vents, turn on unit and inspect if air is flowing through unit. If no airflow please contact Tesla™ Customer Service at (302) 324-8910.</li> </ul>
6. Circuit breaker continuously trips	<ul style="list-style-type: none"> <li><b>A.</b> Unit is overheating.</li> <li><b>B.</b> Internal Short</li> </ul>	<ul style="list-style-type: none"> <li><b>A.</b> Disconnect unit from ac input and dc output.</li> <li><b>B.</b> Switch breaker to ON position.</li> <li><b>C.</b> Reconnect unit to cables and run.</li> <li><b>D.</b> If LEDs still do not illuminate,</li> <li><b>E.</b> Please contact Tesla™ Customer Service at (302) 324-8910</li> </ul>



# Section 7 – Performance Data

## 7.1 – Purpose

This section provides performance data for the unit. Continual reference to this information will enable the user to obtain maximum performance, utilization and service life from the unit. Although maximum performance is not always required, regular referral to this section is recommended for the following reasons:

- A.** To generate knowledge of unit's performance margins to enable the operator to make sound judgment when unexpected conditions or alternate operational requirements are encountered.
- B.** To enable the user to readily recognize situations requiring maximum performance.
- C.** To gain experience in accurately estimating the effects of variables for which data is not presented.
- D.** To help the operator determine if a vehicle or an aircraft system malfunction exists by comparing actual performance with expected performance.



### NOTE

The information, in this section, provides data for operational planning. This is helpful when planning operations under unfamiliar conditions or environmental extremes. The data may also be used to establish local operating procedures and to ensure maximum usage of the unit.

## 7.2 – General

The data presented covers the maximum range of conditions and performance that can reasonably be expected. In each area of performance, the effects of temperature and dc electrical load demand relating to the ground power support requirements are presented. Wherever practical, data is presented conservatively. However, **NO GENERAL CONSERVATISM HAS BEEN APPLIED**. All performance data presented is within the applicable limits of the unit

## 7.3 – Data Basis

The type of data used is indicated at the bottom of each performance chart under DATA BASIS. The applicable report and date of the data are also given. The data provided generally are based on one of three categories:

- A.** Derived From Actual Controlled Testing: Controlled test data obtained on a similar unit type.
- B.** Calculated Data: Data based on tests, but not on a similar unit type placed under a controlled test.
- C.** Estimated Data: Data based on estimates using rules of physics, mathematics, and electrical engineering principles and concepts, but not verified by tests.

## 7.4 – Specific Conditions

The data presented are accurate only for specific conditions listed under the title of each chart or graph. Variables for which data are not presented, but which may affect that phase of performance, are discussed in associated text.

## 7.5 – General Conditions


In addition to the specific conditions, the following general conditions are applicable to the performance data.

- A.** Variation in Aircraft: Power demand differences between individual aircraft of the same make and model are known to exist due to variations in dc electrical system efficiency. These differences, however, are considered insignificant and are not individually accounted for.
- B.** Ground Support and Aircraft Instrument Variations: The data shown in the performance charts do not account for instrument tolerance differences or inaccuracies.


## 7.6 – Temperature Conversion Chart

°C	°F	°C	°F	°C	°F	°C	°F
-60.0	-76.0	-27.0	-16.6	6.0	42.8	39.0	102.2
-59.0	-74.2	-26.0	-14.8	7.0	44.6	40.0	104.0
-58.0	-72.4	-25.0	-13.0	8.0	46.4	41.0	105.8
-57.0	-70.6	-24.0	-11.2	9.0	48.2	42.0	107.6
-56.0	-68.8	-23.0	-9.4	10.0	50.0	43.0	109.4
-55.0	-67.0	-22.0	-7.6	11.0	51.8	44.0	111.2
-54.0	-65.2	-21.0	-5.8	12.0	53.6	45.0	113.0
-53.0	-63.4	-20.0	-4.0	13.0	55.4	46.0	114.8
-52.0	-61.6	-19.0	-2.2	14.0	57.2	47.0	116.6
-51.0	-59.8	-18.0	-0.4	15.0	59.0	48.0	118.4
-50.0	-58.0	-17.0	1.4	16.0	60.8	49.0	120.2
-49.0	-56.2	-16.0	3.2	17.0	62.6	50.0	122.0
-48.0	-54.4	-15.0	5.0	18.0	64.4	51.0	123.8
-47.0	-52.6	-14.0	6.8	19.0	66.2	52.0	125.6
-46.0	-50.8	-13.0	8.6	20.0	68.0	53.0	127.4
-45.0	-49.0	-12.0	10.4	21.0	69.8	54.0	129.2
-44.0	-47.2	-11.0	12.2	22.0	71.6	55.0	131.0
-43.0	-45.4	-10.0	14.0	23.0	73.4	56.0	132.8
-42.0	-43.6	-9.0	15.8	24.0	75.2	57.0	134.6
-41.0	-41.8	-8.0	17.6	25.0	77.0	58.0	136.4
-40.0	-40.0	-7.0	19.4	26.0	78.8	59.0	138.2
-39.0	-38.2	-6.0	21.2	27.0	80.6	60.0	140.0
-38.0	-36.4	-5.0	23.0	28.0	82.4	61.0	141.8
-37.0	-34.6	-4.0	24.8	29.0	84.2	62.0	143.6
-36.0	-32.8	-3.0	26.6	30.0	86.0	63.0	145.4
-35.0	-31.0	-2.0	28.4	31.0	87.8	64.0	147.2
-34.0	-29.2	-1.0	30.2	32.0	89.6	65.0	149.0
-33.0	-27.4	0.0	32.0	33.0	91.4	66.0	150.8
-32.0	-25.6	1.0	33.8	34.0	93.2	67.0	152.6
-31.0	-23.8	2.0	35.6	35.0	95.0	68.0	154.4
-30.0	-22.0	3.0	37.4	36.0	96.8	69.0	156.2
-29.0	-20.2	4.0	39.2	37.0	98.6	70.0	158.0
-28.0	-18.4	5.0	41.0	38.0	100.4	71.0	159.8

### 7.7 – Output Voltage

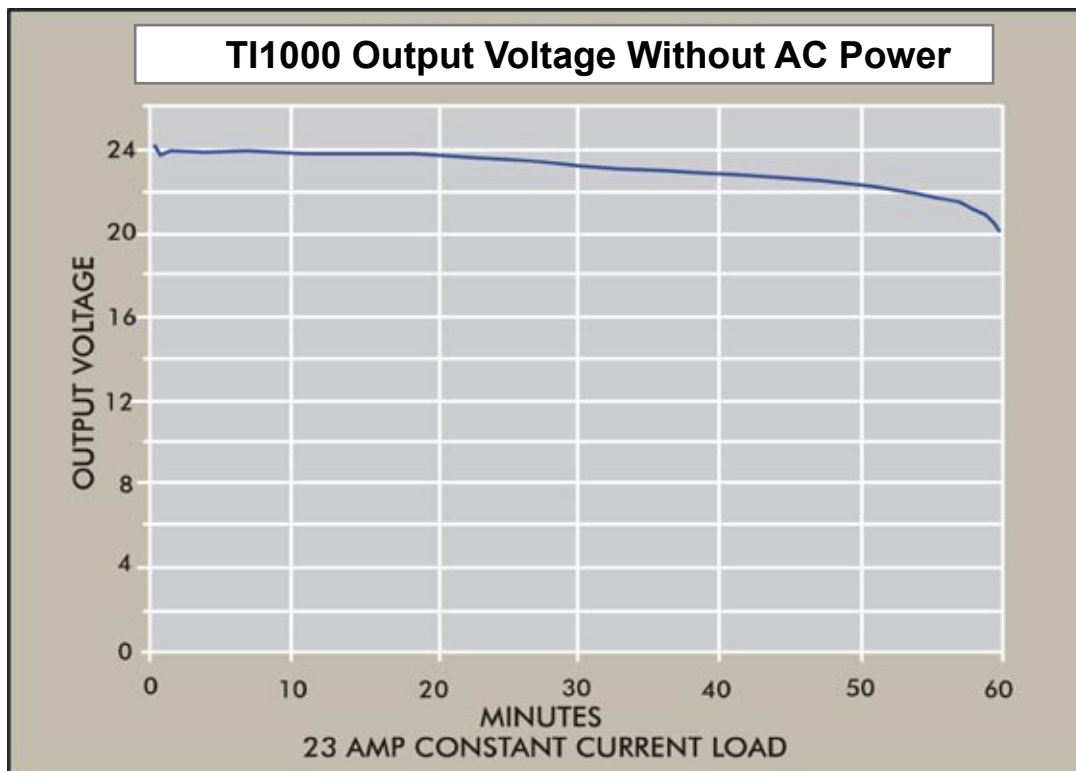

### 7.8 – Maximum Output Current

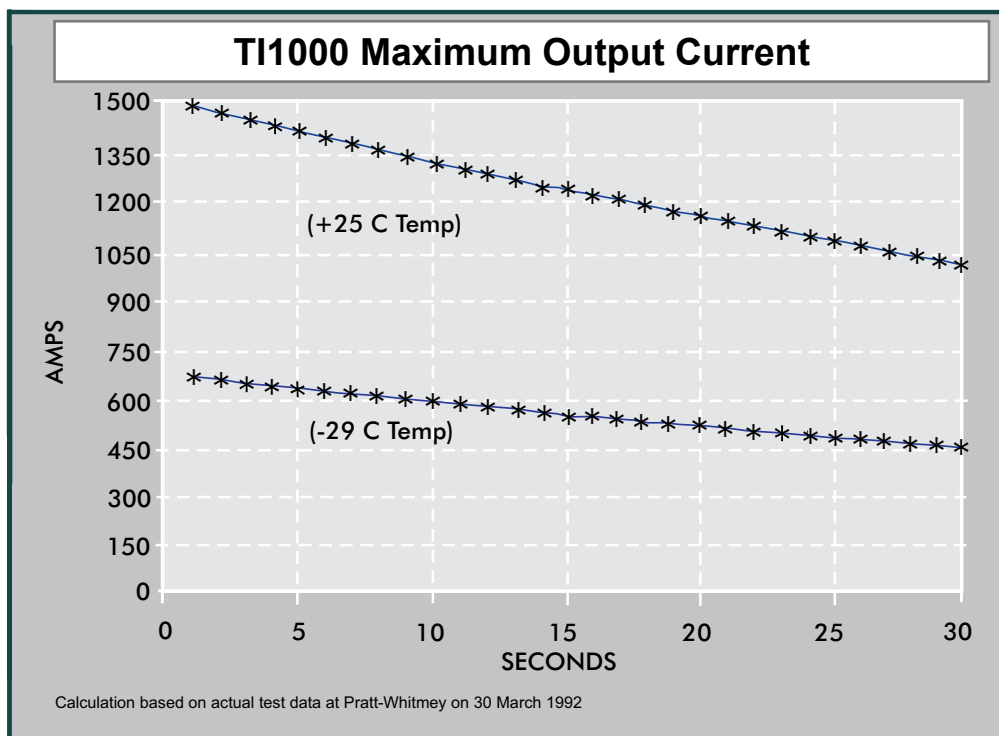

# Section 8 – Optional Accessories

## 8.1 – Tesla™ Shipping Case

The optional Shipping Case is the safest way to transport the TI1000 GPU-24 UAV. This custom case weighs 23 lbs and comes equipped with side handles and locking latches.

### **TI7000-024**

NSN: 8145-01-445-3666

Length: 24” (609.60 mm)  
Width: 8.50” (215.90 mm)  
Height: 19.50” (495.30 mm)  
Weight: 23 Lbs (10.5 kg)



## 8.2 – GPU Protective Covers

Protects unit from moisture, sand and other damaging elements. Custom fit for the TI1000 GPU-24 UAV.

### **TI7000-046**



## 8.3 – Tesla™ AC Line Cords

DC power cables come in several lengths or can be custom-ordered to fit your needs. Tesla™ specializes in outfitting cables with a variety of connectors and junction boxes. Contact Tesla™ Customer Service to find out more about our selection of cables.

### **Regular Line Cords**

For units with a fuse and old-style receptacle.

- TI25000-001 North American Line Cord
- TI25000-002 Italian Line Cord
- TI25000-003 Continental European Line Cord
- TI25000-004 Old British Line Cord
- TI25000-005 England / UK Line Cord
- TI25000-006 Swiss Line Cord
- TI25000-011 Australian Line Cord
- TI25000-200 Israel Line Cord
- TI25000-300 Denmark Line Cord

### **Line Cords**

For units with a circuit breaker and new-style receptacle.

- TI25000-211 North American Line Cord
- TI25000-212 Italian Line Cord
- TI25000-213 Continental European Line Cord
- TI25000-214 Old British Line Cord
- TI25000-215 England / UK Line Cord
- TI25000-216 Swiss Line Cord
- TI25000-201 Australian Line Cord
- TI25000-203 Israel Line Cord
- TI25000-304 Denmark Line Cord
- TI25000-032 North American Commercial Line Cord

\*To be used for TI3000 Commercial Unit only.



NEMA 515P



Italian



Continental European



Old British



England/UK



Swiss



Australian



Israel



Denmark



NEMA 520P

## 8.4 – Transport Dolly

The Tesla™ TI7000-184 is a custom aluminum dolly designed especially to transport Tesla's™ TI1000 GPU. The TI7000-184 is the safest and easiest way to support and transport the TI1000 models out in the field and through hangars and flight lines. Tesla™ stands behind the Transport Dolly with a team of customer service professionals and a 2-year warranty.

TI7000-184 Transport Dolly Dimensions:

16.87" L x 14.5" W x 49.25" H

428.50 mm x 368.30 mm x 1250.95 mm

Weight:

18.5 lbs (8.39 kg)



APPENDIX A

OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA™ PART #</u>
Afghanistan	220	50	TI25000-004 Old British Line Cord
Algeria	220	50	TI25000-004 Old British Line Cord
American Samoa	240	60	TI25000-011 Australian Line Cord
Angola	220	50	TI25000-003 Continental European Line Cord
Anguilla (U.K.)	240	50	TI25000-005 United Kingdom Line Cord
Antigua	230	60	TI25000-005 United Kingdom Line Cord
Argentina	220	50	TI25000-011 Australian Line Cord
Aruba	115	60	TI25000-001 North American Line Cord
Australia	240	50	TI25000-011 Australian Line Cord
Austria	220	50	TI25000-003 Continental European Line Cord
Azores (Portugal)	220	50	TI25000-004 Old British Line Cord
Bahamas	120	60	TI25000-001 North American Line Cord
Bahrain	220	50	TI25000-005 United Kingdom Line Cord
Bangladesh	220	50	TI25000-004 Old British Line Cord
Barbados	115	50	TI25000-001 North American Line Cord
Belgium	220	50	TI25000-003 Continental European Line Cord
Belize (Br. Hond.)	110	60	TI25000-001 North American Line Cord
Benin	220	50	TI25000-004 Old British Line Cord
Bermuda	120	60	TI25000-005 United Kingdom Line Cord
Bolivia	220	50	TI25000-003 Continental European Line Cord
Botswana	220	50	TI25000-005 United Kingdom Line Cord
Brazil	110	60	TI25000-001 North American Line Cord
Bulgaria	220	50	TI25000-003 Continental European Line Cord
Burkina Faso	220	50	TI25000-003 Continental European Line Cord
Burma (Now Myanmar)	230	50	TI25000-005 United Kingdom Line Cord
Burundi	220	50	TI25000-003 Continental European Line Cord
Cambodia	220	50	TI25000-003 Continental European Line Cord
Cameroon	230	50	TI25000-003 Continental European Line Cord
Canada	120	60	TI25000-001 North American Line Cord
Canary Islands (Spain)	220	50	TI25000-003 Continental European Line Cord
Cape Verde, Rep. of	220	50	TI25000-003 Continental European Line Cord
Cayman Islands	120	60	TI25000-001 North American Line Cord
Central African Republic	220	50	TI25000-003 Continental European Line Cord
Chad	220	50	TI25000-003 Continental European Line Cord
Channel Islands	240	50	TI25000-005 United Kingdom Line Cord
Chile	220	50	TI25000-002 Italian Line Cord
China, Peoples Republic of	220	50	TI25000-011 Australian Line Cord
Christmas Island (Australia)	240	50	TI25000-011 Australian Line Cord
Cocos Islands (Australia)	240	50	TI25000-011 Australian Line Cord
Columbia	220	60	TI25000-003 Continental European Line Cord
Congo, Republic of	220	50	TI25000-003 Continental European Line Cord
Cook Island (New Zealand)	240	50	TI25000-011 Australian Line Cord
Costa Rica	120	60	TI25000-001 North American Line Cord
Curacao Islands	110	60	TI25000-001 North American Line Cord
Cyprus	240	50	TI25000-005 United Kingdom Line Cord
Czech, Republic of	220	50	TI25000-003 Continental European Line Cord
Denmark	220	50	TI25000-300 Denmark Line Cord
Djibouti, Republic of	220	50	TI25000-003 Continental European Line Cord
Dominica	230	50	TI25000-005 United Kingdom Line Cord
Dominican Republic	110	60	TI25000-001 North American Line Cord

## APPENDIX A (Cont.)

## OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA™ PART #</u>
Ecuador	120	60	TI25000-001 North American Line Cord
Egypt	220	50	TI25000-003 Continental European Line Cord
El Salvador	115	60	TI25000-001 North American Line Cord
England	240	50	TI25000-005 United Kingdom Line Cord
Equatorial Guinea	220	50	TI25000-003 Continental European Line Cord
Estonia	220	50	TI25000-003 Continental European Line Cord
Ethiopia	220	50	TI25000-003 003 Continental European Line Cord
Fiji	240	50	TI25000-011 Australian Line Cord
Finland	220	50	TI25000-003 Continental European Line Cord
France	220	50	TI25000-003 Continental European Line Cord
French Guiana	220	50	TI25000-003 Continental European Line Cord
Gabon	220	50	TI25000-003 Continental European Line Cord
Gambia	220	50	TI25000-005 United Kingdom Line Cord
Georgia	220	50	TI25000-003 Continental European Line Cord
Germany	220	50	TI25000-003 Continental European Line Cord
Ghana	220	50	TI25000-005 United Kingdom Line Cord
Gibraltar	240	50	TI25000-005 United Kingdom Line Cord
Greece	220	50	TI25000-003 Continental European Line Cord
Greenland (Denmark)	220	50	TI25000-300 Denmark Line Cord
Grenada	230	50	TI25000-005 United Kingdom Line Cord
Guadeloupe	220	50	TI25000-003 Continental European Line Cord
Guam	110-120	60	TI25000-001 North American Line Cord
Guatemala	120	60	TI25000-001 North American Line Cord
Guinea	220	50	TI25000-003 Continental European Line Cord
Guinea-Bissau	220	50	TI25000-003 Continental European Line Cord
Guyana	110	50/60	TI25000-001 North American Line Cord
Haiti	110-120	50-60	TI25000-001 North American Line Cord
Honduras	110	60	TI25000-001 North American Line Cord
Hong Kong	220	50	TI25000-005 United Kingdom Line Cord
Hungary	220	50	TI25000-003 Continental European Line Cord
Iceland	220	50	TI25000-003 Continental European Line Cord
India	220-250	50	TI25000-004 Old British Line Cord
Indonesia	220	50	TI25000-003 Continental European Line Cord
Iran	220	50	TI25000-003 Continental European Line Cord
Iraq	220	50	TI25000-005 United Kingdom Line Cord
Ireland, Republic of	220	50	TI25000-005 United Kingdom Line Cord
Isle of Man	240	50	TI25000-005 United Kingdom Line Cord
Israel	230	50	TI25000-200 Israel Line Cord
Italy	220	50	TI25000-002 Italian Line Cord
Ivory Coast	220	50	TI25000-003 Continental European Line Cord
Jamaica	110	50	TI25000-001 North American Line Cord
Japan	110	50/60	TI25000-001 North American Line Cord
Jordan	220	50	TI25000-005 United Kingdom Line Cord
Kenya	240	50	TI25000-005 United Kingdom Line Cord
Korea, South	220	60	TI25000-003 Continental European Line Cord
Kuwait	240	50	TI25000-005 United Kingdom Line Cord

## APPENDIX A (Cont.)

## OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA™ PART #</u>
Laos	220	50	TI25000-001 North American Line Cord
Latvia	220	50	TI25000-003 Continental European Line Cord
Lebanon	220	50	TI25000-003 Continental European Line Cord
Lesotho	240	50	TI25000-004 Old British Line Cord
Liberia	120	60	TI25000-005 United Kingdom Line Cord
Liechtenstein	220	50	TI25000-006 Switzerland Line Cord
Lithuania	220	50	TI25000-003 Continental European Line Cord
Luxembourg	220	50	TI25000-003 Continental European Line Cord
Libya	230	50	TI25000-002 Italian Line Cord
Macao	220	50	TI25000-004 Old British Line Cord
Madagascar	220	50	TI25000-003 Continental European Line Cord
Maderia (Portugal)	220	50	TI25000-004 Old British Line Cord
Majorca	220	50	TI25000-003 Continental European Line Cord
Malawi	230	50	TI25000-005 United Kingdom Line Cord
Malaysia	240	50	TI25000-005 United Kingdom Line Cord
Maldives	230	50	TI25000-004 Old British Line Cord
Mali, Republic of	220	50	TI25000-003 Continental European Line Cord
Malta	240	50	TI25000-005 United Kingdom Line Cord
Martinique	220	50	TI25000-003 Continental European Line Cord
Mauritania	220	50	TI25000-003 Continental European Line Cord
Mauritius	230	50	TI25000-005 United Kingdom Line Cord
Mexico	127	60	TI25000-001 North American Line Cord
Monaco	220	50	TI25000-003 Continental European Line Cord
Mongolia	220	50	TI25000-003 Continental European Line Cord
Montseurrat	230	60	TI25000-005 United Kingdom Line Cord
Morocco	220	50	TI25000-003 Continental European Line Cord
Mozambique	220	50	TI25000-003 Continental European Line Cord
Namibia (W.S. Africa)	220-250	50	TI25000-004 Old British Line Cord
Nepal	220	50	TI25000-004 Old British Line Cord
Neth. Antilles	220	50/60	TI25000-003 Continental European Line Cord
Netherlands	220	50	TI25000-003 Continental European Line Cord
New Caledonia	220	50	TI25000-003 Continental European Line Cord
New Zealand	230	50	TI25000-011 Australian Line Cord
Nicaragua	120	60	TI25000-001 North American Line Cord
Niger	220	50	TI25000-003 Continental European Line Cord
Nigeria	230	50	TI25000-005 United Kingdom Line Cord
Norfolk Islands (Australia)	240	50	TI25000-011 Australian Line Cord
North Ireland	220	50	TI25000-005 United Kingdom Line Cord
North Mariana Islands (U.S.)	115	60	TI25000-001 North American Line Cord
Norway	220	50	TI25000-003 Continental European Line Cord
Okinawa	100-120	60	TI25000-001 North American Line Cord
Oman	240	50	TI25000-005 United Kingdom Line Cord
Pakistan	230	50	TI25000-004 Old British Line Cord
Panama	110	60	TI25000-001 North American Line Cord
Papua New Guinea	240	50	TI25000-011 Australian Line Cord
Paraguay	220	50	TI25000-003 Continental European Line Cord
Peru	110	50/60	TI25000-001 North American Line Cord
Philippines	115	60	TI25000-001 North American Line Cord
Piccairn Islands (U.K.)	240	50	TI25000-004 Old British Line Cord
Poland	220	50	TI25000-003 Continental European Line Cord
Portugal	220	50	TI25000-003 Continental European Line Cord
Puerto Rico	120	60	TI25000-001 North American Line Cord



## APPENDIX A (Cont.)

## OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA™ PART #</u>
Romania	220	50	TI25000-003 Continental European Line Cord
Russia	220	50	TI25000-003 Continental European Line Cord
Rwanda	220	50	TI25000-003 Continental European Line Cord
Saudi Arabia	220	50/60	TI25000-003 Continental European Line Cord
Scotland	220	50	TI25000-005 United Kingdom Line Cord
Senegal	220	50	TI25000-003 Continental European Line Cord
Seychelles	240	50	TI25000-005 United Kingdom Line Cord
Sierra Leone	230	50	TI25000-005 United Kingdom Line Cord
Singapore	230	50	TI25000-005 United Kingdom Line Cord
Slovakia	220	50	TI25000-003 Continental European Line Cord
Somalia	220	50	TI25000-003 Continental European Line Cord
South Africa	220-250	50	TI25000-004 Old British Line Cord
Spain	220	50	TI25000-003 Continental European Line Cord
Sri Lanka	230	50	TI25000-004 Old British Line Cord
St. Pierre & Miquelon (France)	115	60	TI25000-001 North American Line Cord
St. Kitts & Nevis	230	60	TI25000-005 United Kingdom Line Cord
St. Lucia	240	50	TI25000-005 United Kingdom Line Cord
St. Vincent	230	50	TI25000-005 United Kingdom Line Cord
Sudan	240	50	TI25000-005 United Kingdom Line Cord
Surinam	115	60	TI25000-003 Continental European Line Cord
Svalbard (Norway)	220	50	TI25000-003 Continental European Line Cord
Swaziland	230	50	TI25000-004 Old British Line Cord
Sweden	220	50	TI25000-003 Continental European Line Cord
Switzerland	220	50	TI25000-006 Switzerland Line Cord
Syria	220	50	TI25000-003 Continental European Line Cord
Tahiti	220	50	TI25000-003 Continental European Line Cord
Taiwan	110	60	TI25000-001 North American Line Cord
Tanzania	230	50	TI25000-005 United Kingdom Line Cord
Thailand	220	50	TI25000-003 Continental European Line Cord
Togo	220	50	TI25000-003 Continental European Line Cord
Tonga	115	60	TI25000-004 Old British Line Cord
Trinidad & Tobago	230	60	TI25000-005 United Kingdom Line Cord
Tunisia	220	50	TI25000-003 Continental European Line Cord
Turkey	220	50	TI25000-003 Continental European Line Cord
Uganda	220	50	TI25000-004 Old British Line Cord
United Arab Emir.	220	50	TI25000-005 United Kingdom Line Cord
United Kingdom & Ireland	240	50	TI25000-005 United Kingdom Line Cord
United States	120	60	TI25000-001 North American Line Cord
Uruguay	220	50	TI25000-011 Australian Line Cord
Venezuela	120	60	TI25000-001 North American Line Cord
Vietnam	220	50	TI25000-003 Continental European Line Cord
Virgin Islands	120	60	TI25000-001 North American Line Cord
Wales	220	50	TI25000-005 United Kingdom Line Cord
Western Samoa	230	50	TI25000-005 United Kingdom Line Cord
Yemen	220	50	TI25000-005 United Kingdom Line Cord
Yugoslavia	220	50	TI25000-003 Continental European Line Cord
Zaire, Republic of	220	50	TI25000-003 Continental European Line Cord
Zambia	220	50	TI25000-005 United Kingdom Line Cord
Zimbabwe	220	50	TI25000-005 United Kingdom Line Cord

APPENDIX A (Cont.)

UNIVERSAL LINE CORD KIT FOR WORLDWIDE OPERATIONS

NOTE: TESLA™ UNIVERSAL AC LINE CORD KIT, P/N: **TI25000-U00**, IS FOR UNITS ORIGINALLY BUILT WITH THE UNIVERSAL AC LINE CORD OPTION ONLY.  
THE AC ADAPTER OPTION IS TESLA™ P/N **TI16000-19** AND MUST BE ORDERED WITH THE ORIGINAL PROCUREMENT OF UNIT(S). UNIT(S) MAY BE RETURNED TO TESLA™ INDUSTRIES, FOR A NOMINAL COST, AND MODIFIED TO ALLOW OPERATION WITH THE UNIVERSAL AC LINE CORD KIT.

TESLA™ UNIVERSAL AC LINE CORD KIT, P/N: **TI25000-U00**, IS COMPRISED OF THE FOLLOWING FIVE PART NUMBERS:

TI25000-111	NORTH AMERICAN LINE CORD
TI25000-113	EUROPEAN 10A/250V
TI25000-114	OLD BRITISH LINE CORD
TI25000-115	ENGLAND 10A/250V
TI7000-131	LINE CORD POUCH

# Repair Request Form

Please complete the information below to ensure prompt and accurate service. Include this form with the unit you are returning. Thank you.

Date of return: \_\_\_\_\_

Company name & \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Billing address: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Contact person: \_\_\_\_\_

Phone #: \_\_\_\_\_ Fax #: \_\_\_\_\_

Email: \_\_\_\_\_

Purchase Order #: \_\_\_\_\_

Model #: \_\_\_\_\_ Serial #: \_\_\_\_\_

Model #: \_\_\_\_\_ Serial #: \_\_\_\_\_

Shipping method to Tesla™: \_\_\_\_\_

Description of shipping package: \_\_\_\_\_

Description of problem: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

## Return to Tesla™

101 Centerpoint Boulevard, New Castle, DE 19720 Attention: Repair Department



**WE GET THE MILITARY STARTED!**

**Tesla™**

101 Centerpoint Blvd.  
New Castle, DE 19720 USA  
Tel: 302-324-8910  
Fax: 302-324-8912

9475 Double R Blvd., Suite 2  
Reno, NV 89521  
Tel: 775-622-8801  
Fax: 775-622-8810

[www.teslaind.com](http://www.teslaind.com) ♦ [www.tesla1.com](http://www.tesla1.com)